


How to Edit Alarm Zones in StorLogix

Adding and Editing Alarm Zones

To add and edit alarm zones in StorLogix:

1. Click on your **Facilities** in the home screen. (Alternatively, you can click on the three bars in the top left corner to display the Navigation Menu)

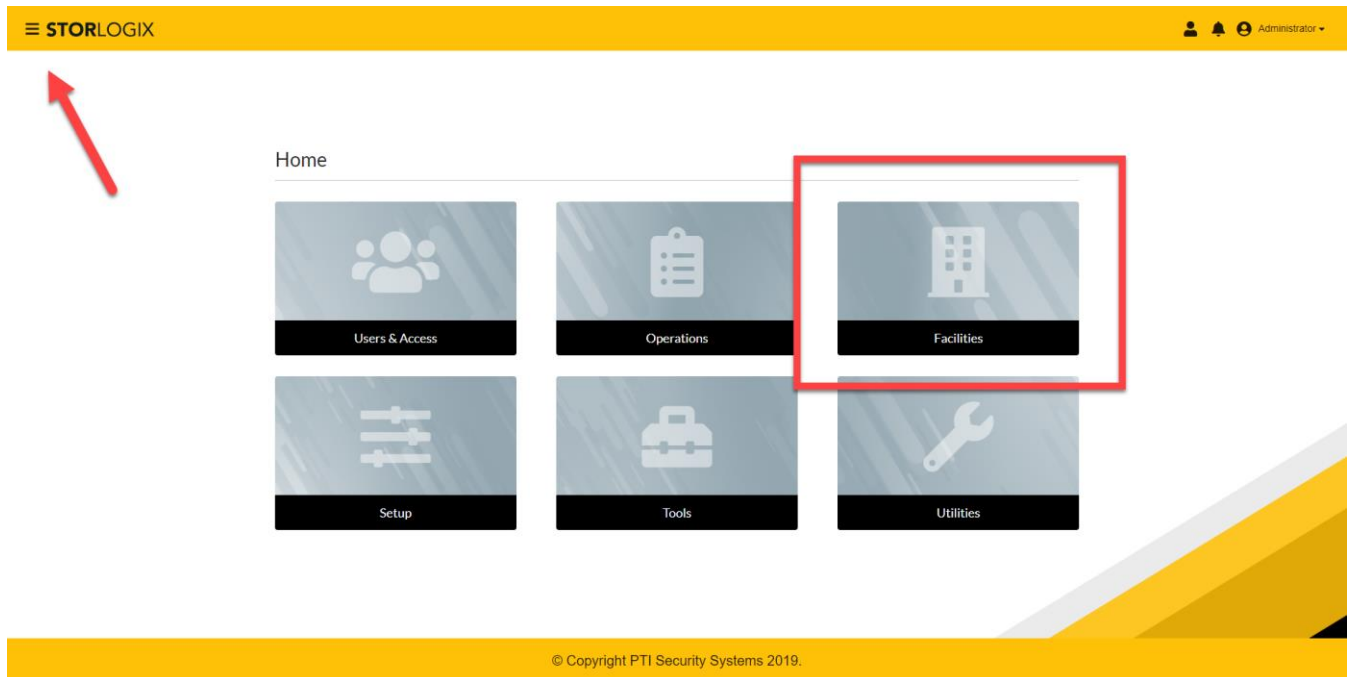

- You will be directed to the Buildings page. You should select **Alarm Zones** on the top navigation bar. This will change screens to a list of alarm zones by their name and status.

The screenshot shows the PTI Security Systems Storlogix interface. The top navigation bar is yellow with the 'STORLOGIX' logo on the left and user information on the right. Below the navigation bar, there are four tabs: 'Buildings', 'Alarm Zones', 'Lighting Areas', and 'Elevators'. A red arrow points to the 'Alarm Zones' tab. Below the tabs, there is a search bar labeled 'Search by Name' and a yellow 'Add Building' button. The main content area displays a table with columns for 'Name' and 'Floors'. The table contains five rows of building information. At the bottom right of the table, there is a pagination control showing 'Items per page: 10' and '1 - 5 of 5'.

Name ↑	Floors
<input type="checkbox"/> Mark G B1	3
<input type="checkbox"/> Mark G B2	10
<input type="checkbox"/> Nate Dawg's Building1	13
<input type="checkbox"/> Tamara's Building	3
<input type="checkbox"/> Tamara's Building 2	4

Items per page: 10 | 1 - 5 of 5 | < >

si-dev-2.barynhills.com/#/facilities/buildings

© Copyright PTI Security Systems 2019.

3. Click on the yellow button that says **Add Zone** on the top right.
 - a. To edit an alarm zone, just double click on the row a specific alarm is on, and it will open a pop-up screen.

The screenshot displays the PTI Security Systems Storlogix interface. At the top, there is a yellow header with the 'STORLOGIX' logo on the left and user information (Administrator) on the right. Below the header is a navigation bar with tabs for 'Buildings', 'Alarm Zones', 'Lighting Areas', and 'Elevators'. The 'Alarm Zones' tab is currently selected. A search bar is located below the navigation bar with the placeholder text 'Search by Zone and Status'. To the right of the search bar is a yellow 'Add Zone' button with a plus icon. Below these elements is a table with columns for 'Zone' and 'Status'. The table contains six rows of alarm zones, each with a checkbox on the left and a vertical ellipsis menu on the right. A red arrow points to the 'Add Zone' button. At the bottom of the table, there is a pagination control showing 'Items per page: 10' and '1 - 6 of 6'.

Zone	Status
<input type="checkbox"/> AlarmZoneDDF	
<input type="checkbox"/> Building 1	Active
<input type="checkbox"/> Building 2	
<input type="checkbox"/> CoolName	
<input type="checkbox"/> Default Alarm Zone	Active
<input type="checkbox"/> DoorBoss Test	

4. Upon clicking on “Add Zones”, you will be presented with a pop-up screen with details to fill out. Once you fill out **Details**, click **Next** on the bottom right corner.
 - a. **Sound Alarm Until Silenced or Cleared** will make the siren continue to sound until someone with the correct security level in StorLogix silences or clears the alarm.
 - b. **Alarm Day Mode** and **Alarm Night Mode** alarms can be sounded for different length of times during the day or night, depending on site location, preferences and local ordinances. Sites in residential areas generally will have a shorter Sound Time during the Night and a longer one during the day, while those in industrial areas may want a longer sound time during the night.

STORLOGIX

Buildings Alarm Zones Lighting Areas Elevators

Search by Zone

Add Zone

1 Details 2 Relays

Name *

Sound Alarm Until Silenced or Cleared

Alarm Day Mode

Start Time * 06:00 am Duration Hr 0 h Duration Min 0 m Duration Sec 0 s Repeat Pause


Alarm Night Mode

Start Time * 06:00 pm Duration Hr 0 h Duration Min 0 m Duration Sec 0 s Repeat Pause

Next

© Copyright PTI Security Systems 2019.

5. The next screen will be the **Relays** screen, select the Relays to activate with the alarm. These will be the relay that the siren is connected to. Once you are finished, click **Submit**.
 - a. The **Alarm Silence Relay** and the **Alarm Panic Relay** are used to create external buttons for the manager to use to trigger a panic alarm or to silence an existing alarm. These can be manual buttons or switches in the office or cash drawer, or a wireless pendant that the manager wears when on-site. Select the virtual relay here that will trigger each of these.
 - b. **Delay Before Sounding** is the time in seconds that the keypad will flash this message before the relay is triggered. Generally, this should be set between 1 - 7 seconds, just long enough for the user to read the message.
 - c. Selecting **Silence when Alarm Zone is Cleared** will stop the alarm when the alarm zone is cleared.

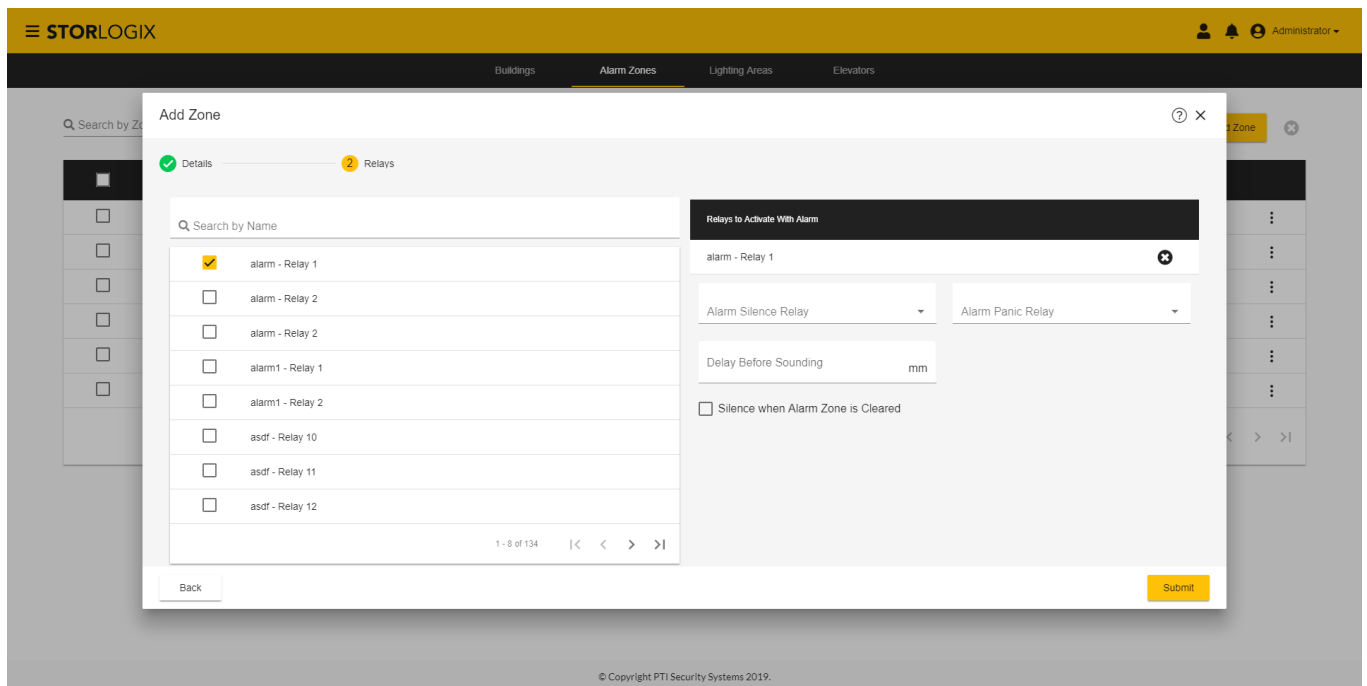

- To **delete an alarm**, simply return to the Alarm Zones screen, and select the check box of the alarm. After you select the alarm(s), click the gray 'x' in the top right corner to delete them.

The screenshot displays the 'Alarm Zones' management interface. At the top, there is a yellow header with the 'STORLOGIX' logo and user information (Administrator). Below this is a dark navigation bar with tabs for 'Buildings', 'Alarm Zones', 'Lighting Areas', and 'Elevators'. The main content area features a search bar labeled 'Search by Zone and Status' and an 'Add Zone' button. A table lists the alarm zones with columns for 'Zone' and 'Status'. The first row, 'AlarmZoneDDF', has its checkbox selected. A red arrow points to the 'x' icon in the top right corner of the table, which is used for deleting selected zones. Another red arrow points to the checkbox for 'AlarmZoneDDF'. The table also includes a footer with 'Items per page: 10' and '1 - 6 of 6'.

Zone	Status
<input checked="" type="checkbox"/> AlarmZoneDDF	
<input type="checkbox"/> Building 1	Active
<input type="checkbox"/> Building 2	
<input type="checkbox"/> CoolName	
<input type="checkbox"/> Default Alarm Zone	Active
<input type="checkbox"/> DoorBoss Test	