

9160 East Bahia Drive Scottsdale, AZ 85260 Phone: 480-257-2600 Fax: 480-257-2599

Support: <u>support.ptisecurity.com</u>
Web: www.ptisecurity.com

## **US Robotics/3COM Courier Modem Settings – Falcon XT**

Use these settings when configuring the switch settings on a US Robotics 33.6K or 56K modem for use in communications between a local Falcon XT controlled site and a remote Falcon XT controlled site installed after May 2011. If you need assistance, please contact our technical support department at <a href="support.ptisecurity.com">support.ptisecurity.com</a>.

## **Modem Switch Settings (PC and Remote Site)**

Recommended dip-switch settings and descriptions:

Switch 1: On – DTR Always On

Switch 2: Off – Verbal Result Codes

Switch 3: On – Display Result Codes

Switch 4: Off – Echo Offline Commands

Switch 5: Off – Auto Answer On Ring

Switch 6: Off - Normal Carrier Detect

Switch 7: On – Result Codes Orig. Mode Only

Switch 8: On – Enable AT Command Set

Switch 9: On – No Disconnect with +++

Switch 10: On – Load &FO Settings