
STORID


UNLOCK THE POWER OF PROEDGE

STEPS TO UNLOCK



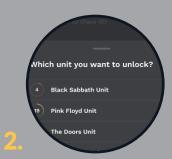



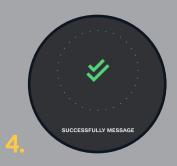





FEATURES & BENEFITS

STEP 1

When logging into the app, verify that Bluetooth and location tracking are enabled on your phone. Wake up the lock by pressing the button on the ProEdge.

STEP 2

When the lock is awake, it will appear in the list of active devices. A window will appear with a list of active devices asking "Which unit do you want to unlock?"

STEP 3

Click on the lock you wish to open. A window will appear with a message of "Do you want to unlock Lock?"

STEP 4

Swipe right on the window to unlock. A "Lock opened" message will then appear. A green LED light will display on the ProEdge.

DOWNLOAD STORID



APPLE STORE



GOOGLE PLAY